PHY 554

Fundamentals of Accelerator Physics Lectures 25-26

Scientific and Societal Applications of Accelerators

<u>Vladimir N. Litvinenko</u>, Yue Hao, Yichao Jing, Gang Wang

Center for Accelerator Science and Education
Department of Physics & Astronomy, Stony Brook University
Collider-Accelerator Department, Brookhaven National Laboratory

http://case.physics.stonybrook.edu/index.php/PHY554_fall_2018

Your presentations: presentation - 25 mins, 5 mins for Q&A

- December 12, Wednesday, 10 am, C120
 - Theodore Sauyet, Light Sources
 - Jiayang Yan , Plasma Wakefield Accelerators
 - Weibin Zhang, CEBAF accelerator

Societal Applications of Accelerators

- **Semiconductors:** The semi-conductor industry relies on accelerator technology to implant ions in silicon chips, making them more effective in consumer electronic products such as computers, smart phones and MP3 players.
- Clean air and water: Studies show that blasts of electrons from a particle accelerator are an effective way to clean up dirty water, sewage sludge and polluted gases from smokestacks.
- Cancer therapy: When it comes to treating certain kinds of cancer, the best tool may be a particle beam.

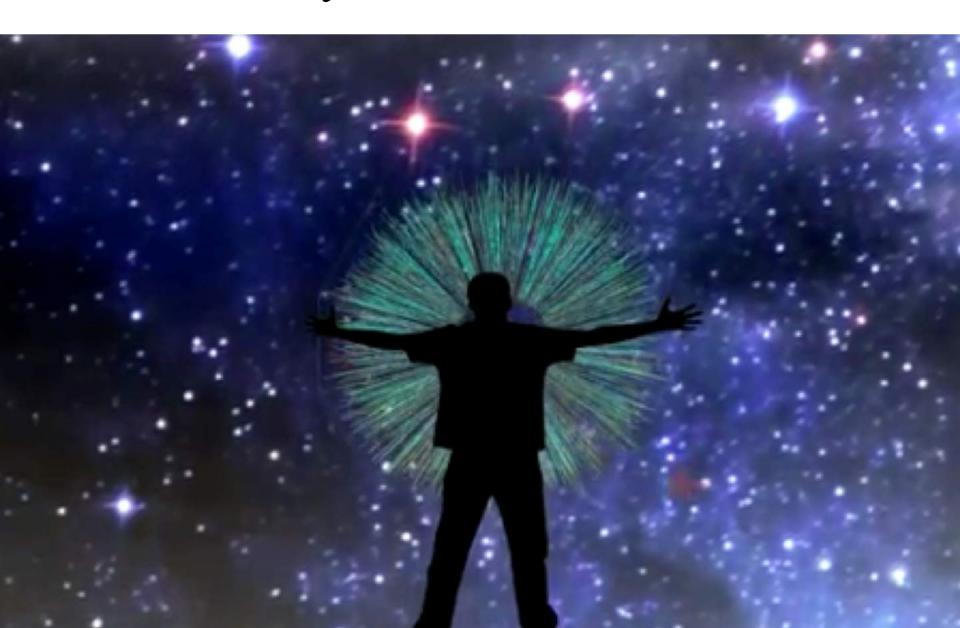
 Hospitals use particle accelerator technology to treat thousands of patients per year, with fewer side effects than traditional treatments.
- **Medical diagnostics:** Accelerators are needed to produce a range of radioisotopes for medical diagnostics and treatments that are routinely applied at hospitals worldwide in millions of procedures annually.
- **Pharmaceutical research:** Powerful X-ray beams from synchrotron light sources allow scientists to analyze protein structures quickly and accurately, leading to the development of new drugs to treat major diseases such as cancer, diabetes, malaria and AIDS.
- **DNA research:** Synchrotron light sources allowed scientists to analyze and define how the ribosome translates DNA information into life, earning them the 2009 Nobel Prize in Chemistry. Their research could lead to the development of new antibiotics.
- **Nuclear energy:** Particle accelerators have the potential to treat nuclear waste and enable the use of an alternative fuel, thorium, for the production of nuclear energy.

http://www.acceleratorsamerica.org/resources/applications/index.html

Scientific Applications

- High energy and Nuclear Physics colliders
- **Neutron sciences** neutron spallation sources
- **Photon Sciences** light sources
 - Pharmaceutical research: Powerful X-ray beams from synchrotron light sources allow scientists to analyze protein structures quickly and accurately, leading to the development of new drugs to treat major diseases such as cancer, diabetes, malaria and AIDS.
 - DNA research: Synchrotron light sources allowed scientists to analyze and define how the ribosome translates DNA information into life, earning them the 2009
 Nobel Prize in Chemistry. Their research could lead to the development of new antibiotics.
- http://www.acceleratorsamerica.org/resources/applications/index.html

Why we need Colliders?




Looking deeper and deeper inside! X10,000 neutron proton X10 **ATOM** $1\text{Å} = 10^{-10}\text{m}$ X100 **Nucleus** 10⁻¹⁴m **Proton** 10^{-15} m **Quarks and Gluons USA** 10⁻¹⁷m increase beam energy State of NY Manhattan

High Energy and Nuclear Physics

- Colliders world's most powerful microscopes
- Hence, they allow to look into the matter on smaller and smaller scale, and, sometimes, discover new states of mater or new particles

$$\delta x \cdot \delta p \ge \hbar \qquad \delta p \le \frac{E_{cm}}{c}; \ \delta x \ge c \frac{\hbar}{E_{cm}}$$
or for new particles
$$M_{part} \le \frac{E_{cm}}{c^2}$$

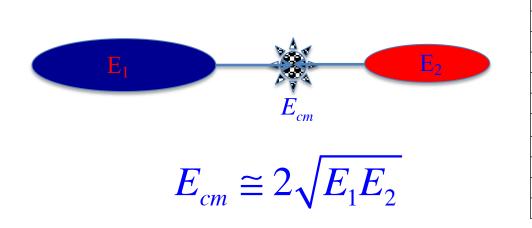• For ultra-relativistic particles the c.m. energy is a simply twice the geometrical average of the colliding particles



			T
Collider	E_1 , GeV	E ₂ , GeV	E _{cm} , GeV
RHIC	250 p	250 p	500.0
eRHIC	250 p	21.2 e-	145.6
LHC	6500 p	6500 p	13,000.0
B-factory	3.5 e-	10.58 e+	12.2
Fixed target	E ₁ , GeV	E ₂ , GeV	E _{cm} , GeV
CEBAF	6 e-	0.938 p	4.7
	12 e-	0.938 p	6.7
	6 e-	0.00051 e-	0.1
	12 e-	0.00051 e-	0.2

Productivity of colliders

It is called LUMINOSITY

$$L = f_c \frac{N_1 N_2}{A} \cong f_c \frac{N_1 N_2}{2\pi \sqrt{\beta_{x1} \varepsilon_{x1} + \beta_{x2} \varepsilon_{x2}} \sqrt{\beta_{y1} \varepsilon_{y1} + \beta_{y2} \varepsilon_{y2}}}$$


If an event A->B has a cross-section (for example generating HIGGS particle), then the speed of producing them is simply given by the Product of the cross-session and the luminosity

$$\dot{N}_{A\to B} = \sigma_{A\to B} \cdot L$$


Luminosity is measured in cm⁻²sec⁻¹

Collider	L	
RHIC	10^{32}	
eRHIC	$10^{33} - 10^{34}$	
LHC	10^{34}	
B-factory	10^{34}	
Fixed target	L	
CEBAF	10^{35}	

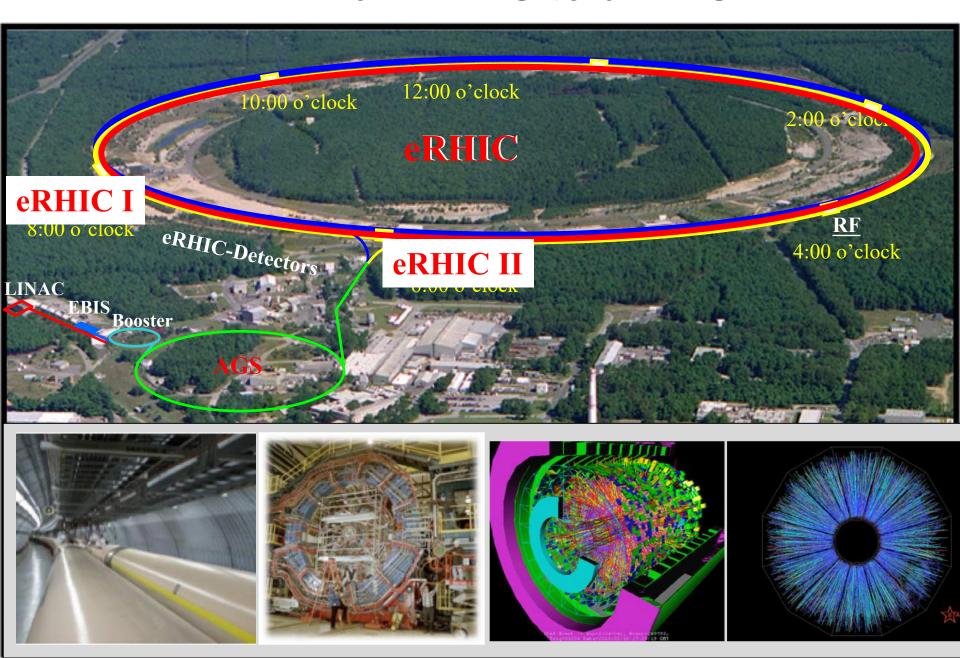From RHIC to eRHIC



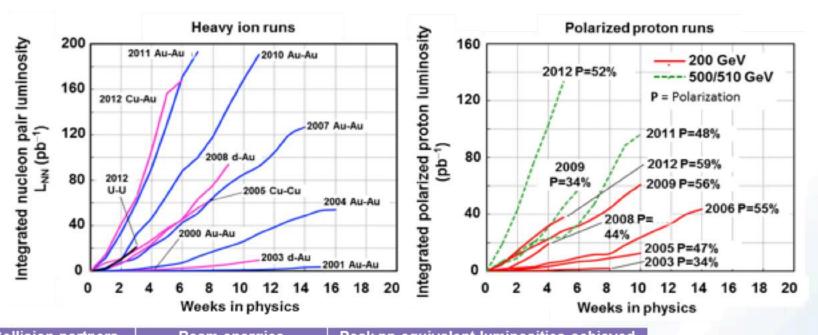Dramatic Improvements in Performance & Versatility



Collision partners	Beam energies (GeV/nucleon)	Peak pp-equivalent luminosities achieved to date, scaled to 100 GeV/n ^{b)}	
	Used to	date	
Au+Au	3.85, 4.6, 5.75, 9.8, 13.5, 19.5, 31, 65, 100	195 × 10 ³⁰ cm ⁻² s ⁻¹	
d+Au ^{a)}	100	$100 \times 10^{30} \text{ cm}^{-2} \text{s}^{-1}$	
Cu+Cu	11, 31, 100	80 × 10 ³⁰ cm ⁻² s ⁻¹	
p↑+p↑ (polarized)	11, 31, 100, 205, 250, 255	165 × 10 ³⁰ cm ⁻² s ⁻¹ at 255 GeV	
Cu+Au ^{a)}	100	$230 \times 10^{30} \text{ cm}^{-2} \text{s}^{-1}$	
U+U	96	60 × 10 ³⁰ cm ⁻² s ⁻¹	
Considered for future			
Au+Au	2.5, 7.5		
p+Au	100		
p↑+ ³He↑ ^{a)}	166		

© W. Fischer

2 new colliding beam species / combinations in 2012

NATIONAL LABORATORY

10

Run-18 Overview

Very flexible operation

6 modes, frequent parallel activities, frequent changes


in addition running Linac for BLIP and EBIS/Booster for NSRL (including the Galactic Cosmic Ray Simulator – up to 33 beams in 1 h 20 min), and Tandem for industrial and academic users

most challenging in terms of flexibility to date


Mode	Primary activity with beam energy per nucleon	Secondary activities in parallel or within	Time [d]
1* 2*	Zr+Zr 100 GeV Ru+Ru 100 GeV	CeC, LEReC CeC, LEReC	63
3A	Au+Au 13.5 GeV	CeC, LEReC, Mode 3B	30.7
3B	Au+Au 3.85 GeV fixed target	LEReC Machine Development for BES-II	4.6
3C	CeC PoP dedicated, Au 26.5 GeV	Au+Au 26.5 GeV fixed target	7.7
4	LEReC dedicated	CeC	89

^{*} First collider operation ever with species switch store-by-store.

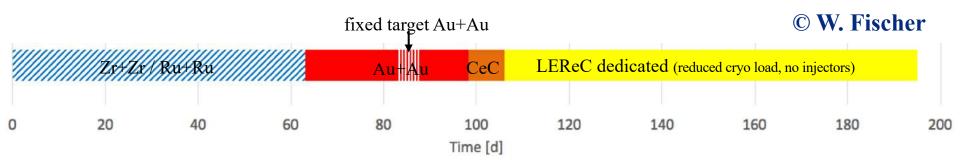Setup for Modes 1/2 in record 6 days - with 3 beams (Au, Zr, Ru) and including 2 snow storms with multiple power dips.



QCD Phase Diagram

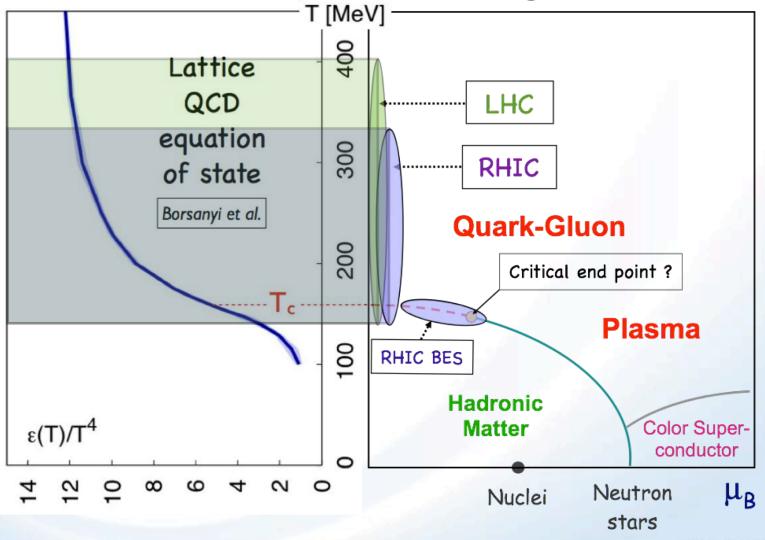



Anisotropic flow: The Perfect Liquid







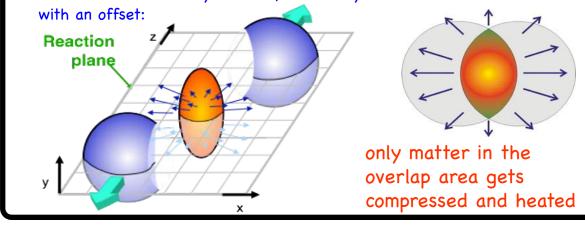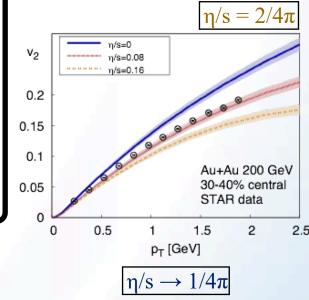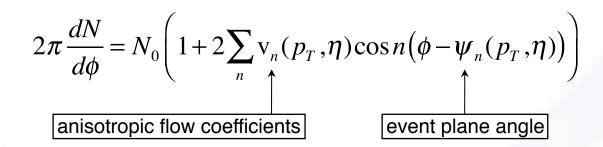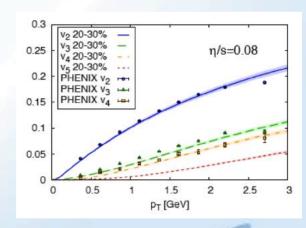 $\eta/s = 1/4\pi$












LHC – energy frontier

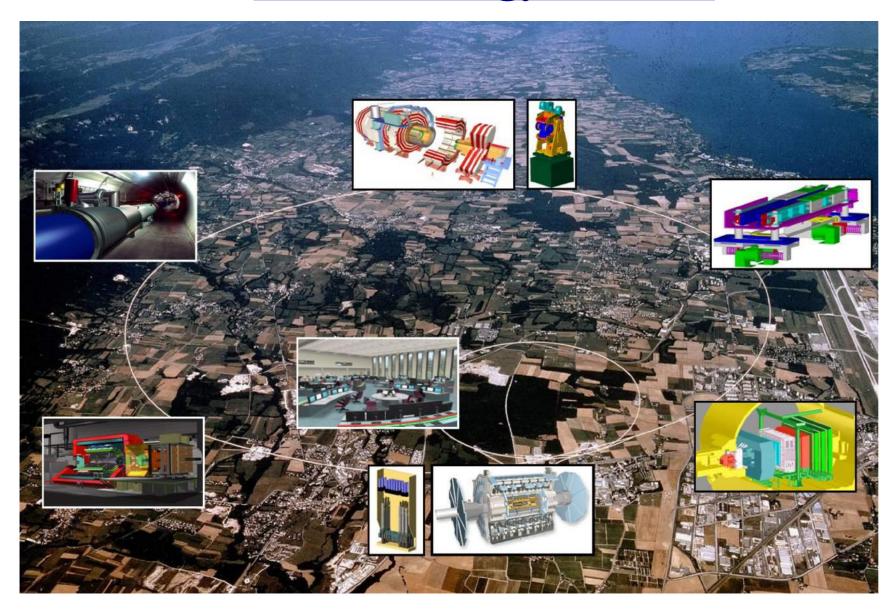



LHC – energy frontier




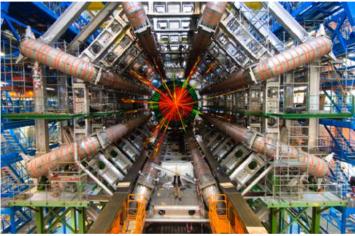

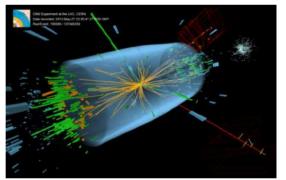

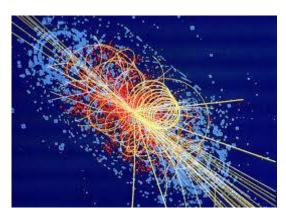

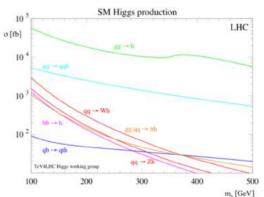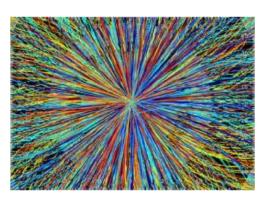








Z=79, A=197




 $r = 7 \text{ fermi} = 7 \times 10^{-15} \text{ m}$ $A = \pi r^2 = 154 \text{ fermi} = 1.54 \times 10^{-28} \text{m}^2$ A = 1.54 barns


1 barn = 10^{-28} m² = 100 fm²

A 6 MeV alpha particle approaching a gold nucleus with an impact parameter equal to the gold nuclear radius of 7 fm would be scattered through an angle of almost 140°. We would say that the cross section for scattering at or greater than 140° is 1.54 barns.


1 Barn= 10^{-28} cm², 1 fb= 10^{-43} cm²

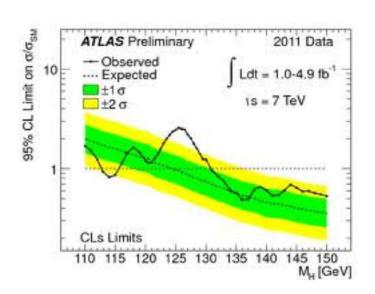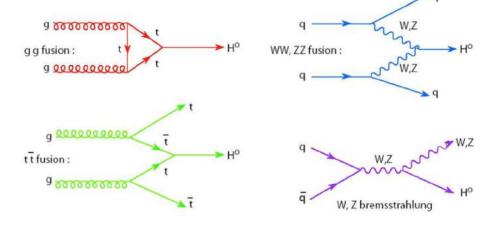
Higgs at LHC: blip in cross-section





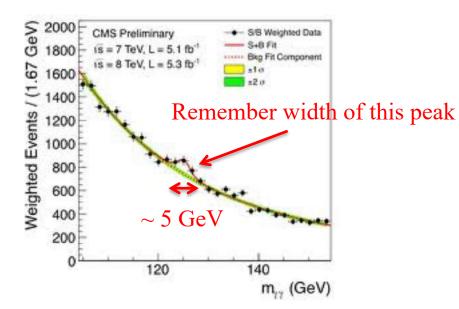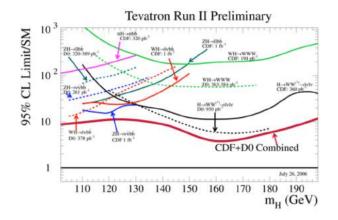Tevatron at FERMILAB has necessary energy reach but did not had enough luminosity to find Higgs – it only had "hints"





New project under consideration FCC: Future Circular Collider Design Study by 2018 (for next EU Strategy Update of HEP) Collision p-p, ions-ions, p-ions but also e+-e- at 350 GeV and e-p 16 T ⇒ 100 TeV in 100 km 20 T ⇒ 100 TeV in 80 km LEGEND LHC tunne HE LHC 80km option otential shaft location

New challenge: SR power of proton beam is large and has to be evacuated from inside 4K SC magnets...

Why leptons and not hadrons?

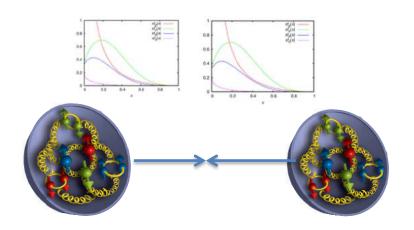
Scattering of protons on protons is like colliding Swiss watches to find out how they are built.

R. Feynman




Why e⁺e⁻ or e⁻h colliders?

To the best of our knowledge electrons and positions (or muons) do not have internal structure



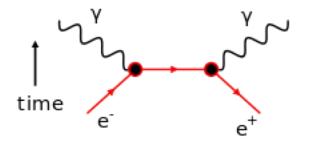Colliding hadron is as colliding two caps of quark-gluon soup (+ sea quarks): energies and polarization are varying and initial state is unknown





space ----

Pure initial state (energy of annihilated electron-positron pair)

Very precise knowledge of the energy and polarization

B-factories

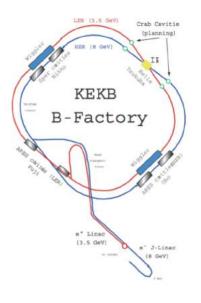

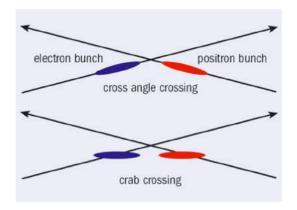



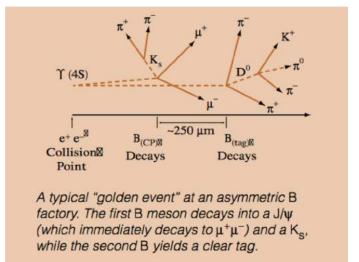



Figure 1: A schematic view of the KEKB.

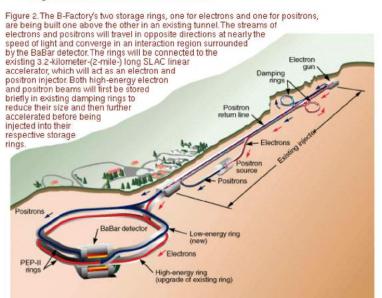

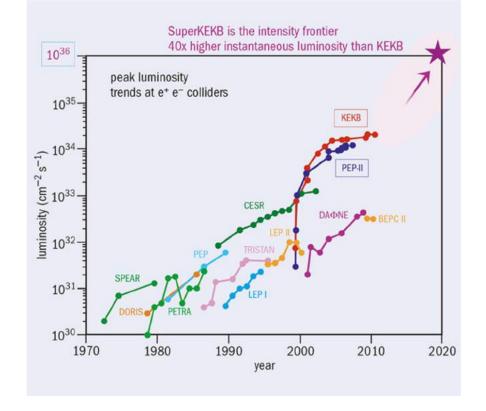


Resonance depolarization method

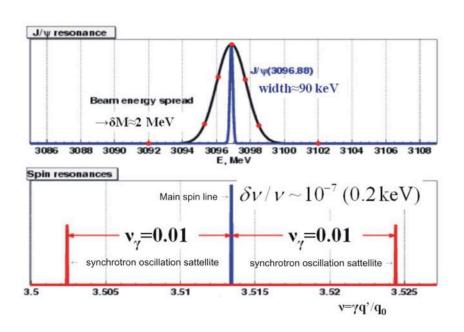
BEAM ENERGY SPREAD AND SPIN SPECTRA at VEPP-4M



In homogeneous magnetic field a width of the spin spectra is $\sim 10^{-9}$!

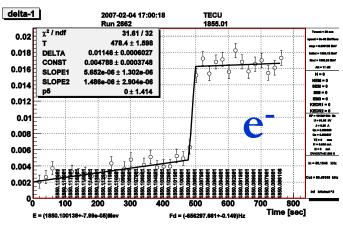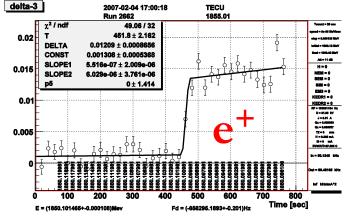
In real storage ring it is $\sim 10^{-7}$ due to betatron oscillations and nonlinearity of magnetic field and noise in magnet system





 E_p - E_e =(1.32±0.14) keV: 0.4 p.p.m. energy accuracy Compare this with 1% scale resolution in p-p collisions

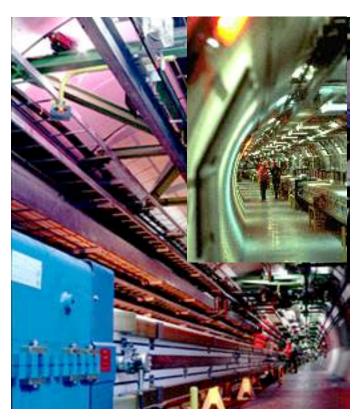Largest e⁺e⁻ collider - LEP




The LEP machine at CERN is the largest particle collider in the world. In a ring 27 km in circumference, buried about 100 m underground, bunches of electrons and positrons race round in opposite directions...

Last sprint for LEP

The Director General, Prof. Luciano Maiani, began his report with the performance of the Laboratory's flagship accelerator, the Large Electron-Positron collider, LEP, during its final year. LEP is achieving its highest energy collisions ever with beams of over 104 GeV, well exceeding its design energy and giving experiments a final chance of discovering the still-elusive Higgs particles before the end of it's experimental programme in September. Thanks to precision data from LEP and elsewhere, scientists already know that Higgs particles, if they exist, must be within range of LEP's successor, the LHC.

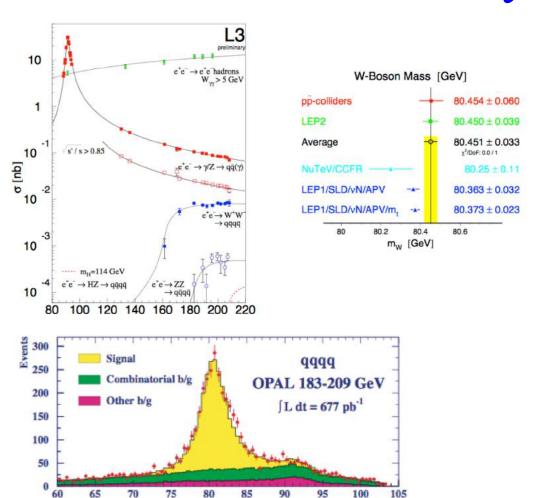LEP – W & Z factory



m/GeV

Figure 19. Reconstructed W mass distribution for all OPAL $W^+W^- \to q\bar{q}q\bar{q}$ data from $\sqrt{s}=183$ to 209 GeV. The histogram shows the SM expectation for $M_W=80.42$ GeV.

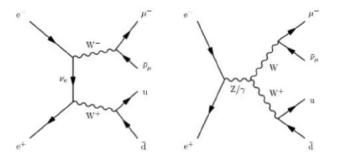


Figure 16. CC03 diagrams for W^+W^- production with subsequent decay into $u\bar{d}$ and $\mu\bar{\nu}_{\mu}$.


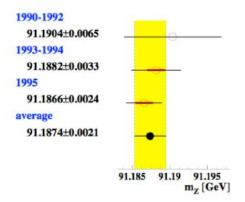


Figure 5. m_Z combined by EWWG for the different periods of data taking.


$$m_W = 80.450 \pm 0.026 (stat.) \pm 0.030 (syst.) GeV.$$

 $m_Z = 91.1874 \pm 0.0021 \ GeV.$

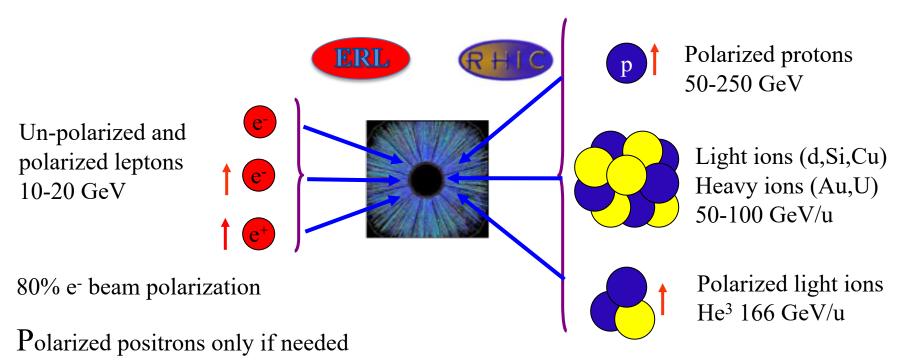eRHIC: QCD Facility at BNL



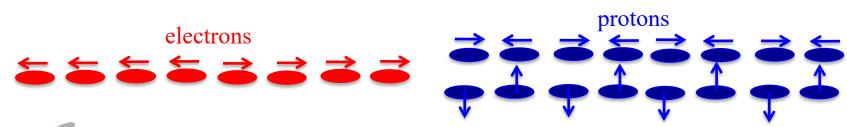Center mass energy range: \sqrt{s} =30-140 (175) GeV; Luminosity ~ 10^{33} - 10^{34} cm⁻² sec⁻¹









EIC Science: Gluon-Dominated Cold Matter in e+A

Search for supersymmetry @ LHC, ILC (?): seeking to unify matter and forces

Electron-Ion Collider: reveal that Nature blurs the distinction

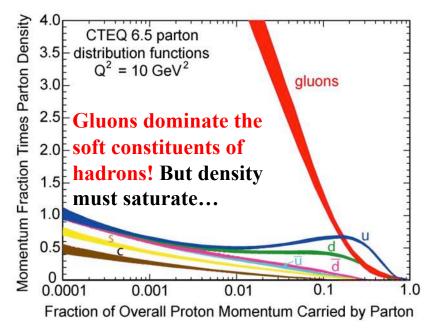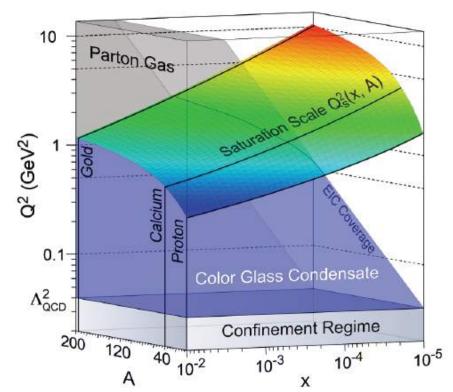Deep inelastic scattering (a) **HERA** \Rightarrow





EIC probes weak coupling regime of very high gluon density, where gauge boson occupancy >> 1. All ordinary matter has at its heart an intense, semi-classical force field -- can we demonstrate its universal behavior? Track the transition from dilute parton gas to CGC? "See" confinement reflected in soft-gluon spatial distributions inside nuclei?

Industrial Applications

- ✓ Ion Implantation
- ✓ Electron beam materials processing
- ✓ Electron beam irradiators
- ✓ Radioisotope production
- ✓ Ion Beam Analysis
- ✓ High Energy X-ray Inspection
- ✓ Neutron generators
- ✓ Synchrotron radiation
- ✓

Industrial Accelerators

DC Voltage

- Van de Graaff Use a charge carrying belt or "chain". Energies range from 1 to 15 MeV at currents from a few nA to a few mA.
- Dynamitron & Cockcroft Walton generator Basically voltage multiplier circuits at energies to up to 5 MeV and currents up to 100 mA.
- Inductive Core Transformer (ICT) A transformer charging circuit with energies to 3 MeV at currents to 50 mA.

RF Linacs

- Electron linacs standing wave cavities from 0.8 to 9 GHz. Energies from 1 to 16 MeV at beam power to 50 kW.
- Ion linacs all use RFQs at 100 to 600 MHz. Energies from 1 to 70 MeV at beam currents up to mA.

• Circular

- Cyclotrons ion energies from 10 to 70 MeV at beam currents to several mA.
- Betatrons electron energies to 15 MeV at few kW beam power.
- Rhodotron electron energies from 5 to 10 MeV at beam power up to 700 kW.
- Synchrotron electron energies up to 3 GeV and ion energies up to 300 MeV/amu.

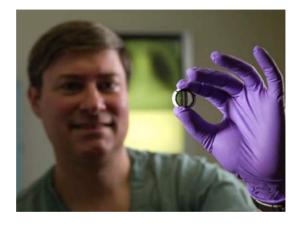
Materials modification

Electron beams make shrink wrap tougher and better for storing food and protecting other products, such as board games, CDs and DVDs






The auto industry uses particle accelerators to treat the material for radial tires, eliminating the use of solvents that pollute the environment.



There is a hope to improve the safety of artificial heart valves by forming them from material bombarded by ions

Ion implantation

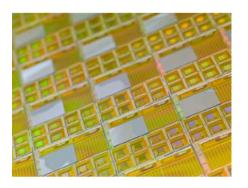The semiconductor industry relies on accelerator technology to implant ions in silicon chips.



Semiconductors

- CMOS fabrication
- SIMOX
- Cleaving silicon
- MEMS

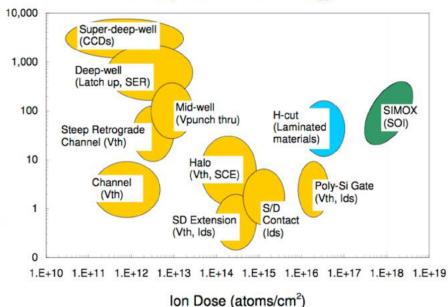
Metals

- Harden cutting tools
- Artificial human joints

Ceramics & glasses

- Harden surfaces
- Modify optics

Ion Implantation Dose & Energy



All digital electronics now dependent on ion implantation.



Ion implantation

Ion Implantation Accelerators

Accelerator classifications

Low energy/ high current

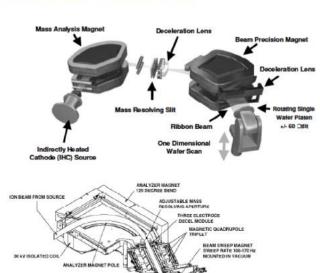
- "High current implanters"
- Ion energies from few hundred eV to tens of keV.
- · Variable energy, single gap with currents to 50 mA.

Medium energy/ medium current

- Original ion implanter
- Variable energies of 50 to 300 keV range
- Currents in the 0.01 to 2 mA range.
- Usually multi-gap direct voltage units using voltagemultiplier HV power supply.

High energy/ low current

- Variable energy from 1 to 10 MeV
- Beam currents to hundreds of microamperes.
- Can be linacs or tandem charge-exchange columns
- Both use high-charge-states for upper energy range.





Material Processing/Modifications

- Electron beam processing involves irradiation (treatment) of products using a high-energy electron beam
- Electron beam processing is used in industry primarily for three product modifications:
 - Crosslinking of polymer-based products to improve mechanical, thermal, chemical and other properties
 - Material degradation often used in the recycling of materials
 - Sterilization of medical and pharmaceutical goods, foods and other products

Material Processing/Modifications


Electron Beam Irradiators

- Cross linking of materials (largest application)
- Sterilization of single-use disposable medical products surgical gowns, surgical gloves, syringes, and sutures (growing applications)
- Food and waste irradiation (largest potential applications)

Cross linking applications

Product	Applications
Cross-linked polyethylene(PE) and PVC	Heat and chemical-resistant wire insulation; pipes for heating systems
Cross-linked foam polyethylene	Insulation, packing and flotation material
Cross-linked rubber sheet Cross-linked polyurethane	High quality automobile tires Cable insulation
Cross-linked nylon Heat resistant SiC fibers	Heat and chemical resistant auto parts Metal and ceramic composites
Vulcanized rubber latex Cross-linked hydrogel	Surgical gloves and finger cots Wound dressings
Acrylic acid grafted PE film Grafted polyethylene fiber	Battery separators Deodorants
Curing of paints and inks	Surface coating and printing

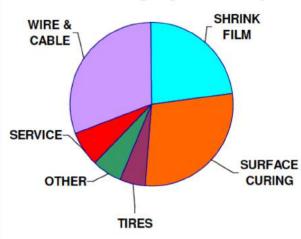Cross linking by industry



Total of \$50 billion per year

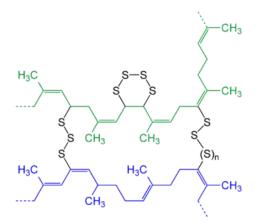
Material Processing/Modifications

Electron Beam Irradiation Accelerators


- 100 to 300 keV Single gap, self-shielded sheet beam systems without beam scanning.
 Beam currents from 10 to 2000 mA; treat 1 to 3 m wide material. Used for curing thin film coatings and cross-linking laminates and single strand wire.
- 450 to 1000 keV Larger dc systems with scanned beams and self-shielding. Beam currents from 25 to 250 mA; treat 0.5 to 2 meter wide material. Mainly used for cross-linking, curing and polymerization processes in the tire, rubber and plastics industry.
- 1 to 5 MeV Scanned beam dc systems capable of 25 to 200 kW beam power; scanned beam width up to ~2 meters. Used for cross-linking and polymerization of thicker materials, and for sterilization of medical products.
- 5 to 10 MeV High energy scanned beam systems capable of 25 to 700 kW beam power. Used for medical product sterilization and cross-linking and polymerization of even thicker materials. They are also used as x-ray generators for food irradiation, waste water remediation, and gemstone color enhancement for topaz and diamonds.

Crosslinking

- A cross-link is a bond that links one polymer chain to another.
- Cross-linking is used in both synthetic polymer chemistry and in the biological sciences.
- Although the term is used to refer to the "linking of polymer chains" for both sciences, the extent of crosslinking and specificities of the crosslinking agents vary. Of course, with all science, there are overlaps, and the following delineations are a starting point to understanding the subtleties.
- When cross links are added to long rubber molecules, the flexibility decreases, the hardness increases and the melting point increases as well.




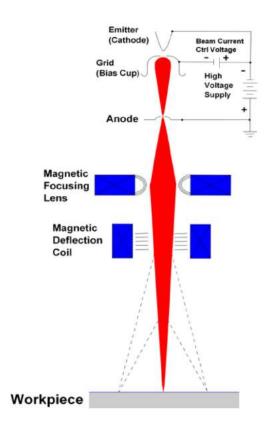Vulcanization is an example of cross-linking. Schematic presentation of two "polymer chains" (blue and green) cross-linked after the vulcanization of natural rubber with sulfur (n = 0, 1, 2, 3 ...).



Micro-biological sterilization

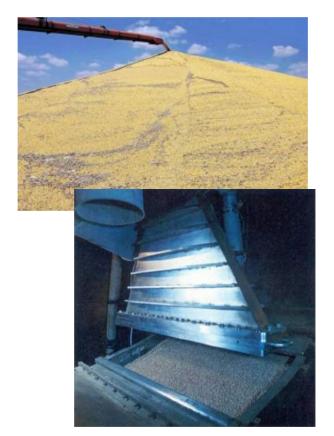- ✓ Electron beam processing has the ability to break the chains of DNA in living organisms, such as bacteria, resulting in microbial death and rendering the space they inhabit sterile.
- ✓ E-beam processing has been used for the sterilization of medical products and aseptic packaging materials for foods as well as disinfestation, the elimination of live insects from grain, tobacco, and other unprocessed bulk crops.
- ✓ Sterilization with electrons has significant advantages over other methods of sterilization currently in use. The process is quick, reliable, and compatible with most materials, and does not require any quarantine following the processing.



Granary weevil



Granary weevil (*Sitophilus granarius*): An adult lays up to 450 eggs singly in holes chewed in cereal grains. Each egg hatches into a white, legless larva, which eats the grain from the inside. The larva pupates within the grain and the adult then chews its way out. The exit holes are characteristic signs of weevil damage. The life cycle takes about one month under summer conditions and adults may survive for a further eight months. The granary weevil is a small dark brown-black beetle about 4mm long with a characteristic rostrum (snout) protruding from its head. It has biting mouth parts at the front of the rostrum and two club-like antennae.

Sterilization of products





Pest & Pathogen Control:

Example: Half of grain produced on the Earth is infested by bugs: they have to be stopped, or grain is gone...

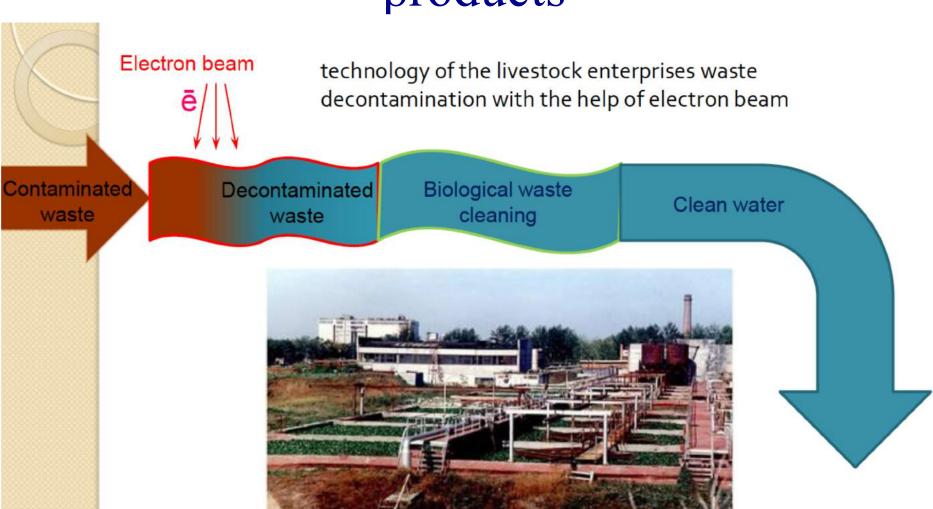
Electron Beam processing as a disinfestation method replaces antiquated environmentally unfriendly methods such as fumigation and chemical dipping.

A significant area for this technology is the herb and spice industry. These commodities are valued for their distinctive flavors, aromas and colors. They can be processed by this technology to reduce bacterial contamination without compromise to their sensory properties.

Fruits, vegetables, grains and other food items can be processed by Electron Beam to control fruit flies and other insects that use these commodities as a host for propagation.

Suitable as a quarantine measure, several countries rely on this technology to treat food commodities prior to exporting


Sterilization of *other*, *less testy*, products



What else?





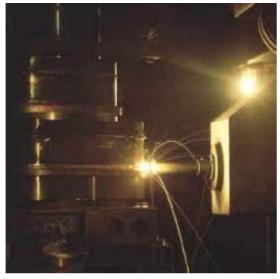




Key advantages

- Using electron beam with energies below 10 MeV (e.g. below giant nuclear resonance!) does not leave residual radioactivity
- To a large degree, it is just a use of electrical power to eliminated the intruders
- Hence, such treatment does not changes chemical structure of the irradiated products while effectively killing leaving bugs or bacteria
- Replacing dangerous (killer!) chemicals with is environmentally neutral treatment

Medical Applications

- ✓ In contrast with other applications, medical applications of any technology is most humane and broadly accepted by society.
- ✓ Some of accelerator applications in medicine like radiation therapy are well known.
- ✓ Many are know only to experts.
- ✓ Here is a short (and incomplete) list of accelerator applications in medicine :
 - ✓ Hadron radiation therapy
 - ✓ Gamma-ray (Photon) radiation therapy
 - ✓ X-ray tubes
 - ✓ Sterilization of material & equipment
 - ✓ Isotopes
 - ✓ Angiography
 - ✓ Neutron capture therapy
 - ✓ Genome project
 - ✓ Reconstruction of protein structures
 - ✓ Developing new drugs and new materials

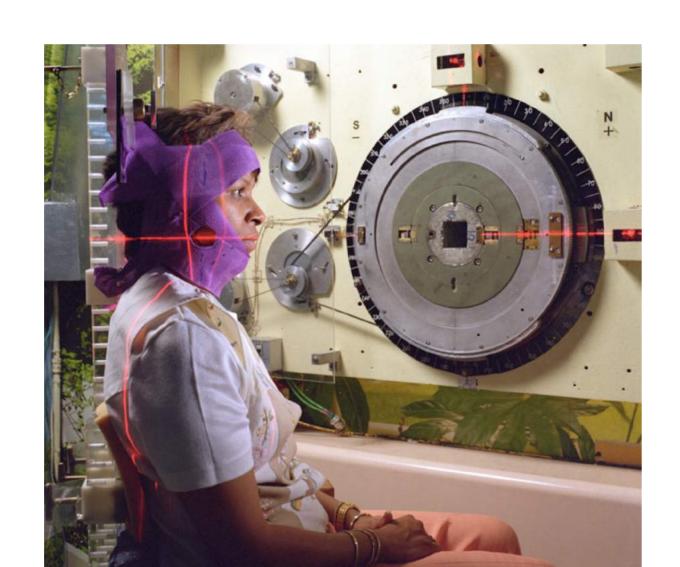γ-Ray Radiation Therapy




X-ray tubes are well known

History of medical applications of accelerators

- 1895 Wilhelm Conrad Röntgen (1845 1923) discovers the X-rays on 8th November at the University in Würzburg
- 1896 On 23rd January Röntgen announced his discovery and demonstrated the new kind of radiation by a photograph of the hand of his colleague Albert von Kolliker
- 1897 First treatments of tissue with X-rays by Leopold Freund at University in Vienna
- 1901 Physics Nobel prize for W.C. Röntgen

Schematics of an X-ray tube – an "electrostatic accelerator"

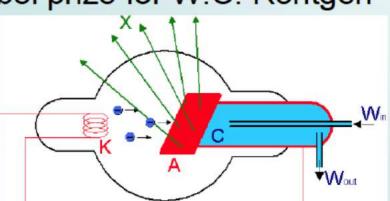






X-ray tubes and beyond

History of medical applications of accelerators

1899	First X-ray treatment of carcinoma in
	Sweden by Stenbeck and Sjögren
1906	Vinzenz Czerny founded the "Institute
	for Experimental Cancer research" in
	Heidelberg – the first of its kind
1913/4	Invention of part- and full-rotation
	radiation instrumentation
1920's	Industrially manufactured X-ray
	apparatus; example from Reiniger-
	Gebbert & Schall AG (later: Siemens),
	Erlangen; 1922) with a high-voltage of
	150 kV – without shielding!
1930	First linear accelerator principle
	invented by Rolf Wideroe
1949	
1343	Newberry developed first linear accele-

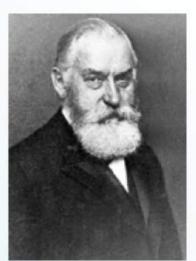rator for therapy in England






X-ray tubes and beyond

History of medical applications of accelerators

1950's Development of compact linear accelerators by and Varian, Siemens, GE, Philipps and others

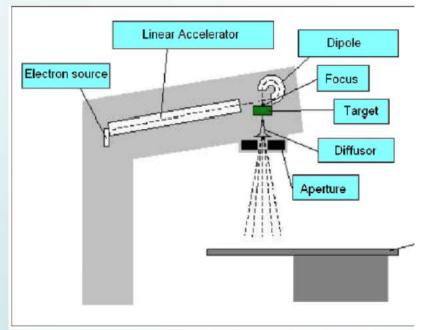later with energies up to around 25 MeV (and above)





radiotherapy (Stanford linac)

modern linac for therapy

Linac-based γ-Ray Radiation Therapy

Started in 1956 and since then treated about 50 million patients
In developed countries there is 5-10 medical linacs per 1 million inhabitants
It simply means that there are thousands of such accelerator!

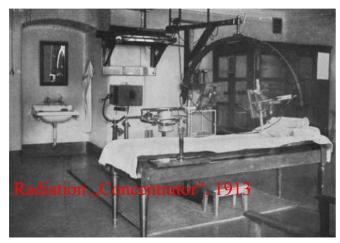


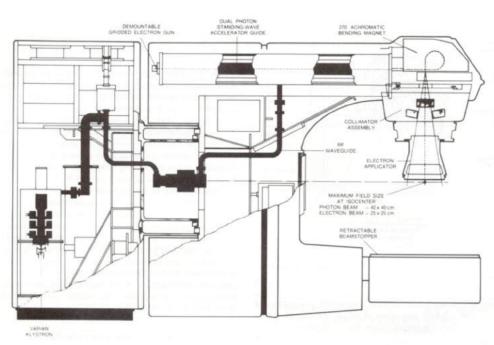


Table 1
Number of Radiotherapy units in France, on 1 January 1995 [1]


	GE-CGR	MeV	Other Companies		Total *
4-6 MV	Orion 5	19	Siemens (Mevatron)	3	36
			Philips (SL 75/5)	9	(+5)
			Clinac 600 C		
10 MV	Neptune 10	26			29
	Saturne 1M	3			(-1)
15 MV	Saturne 15	5	Siemens (Mevatron MD)	8	51
	Saturme 1	9	Philips (SL 18)	6	(+17)
	Saturne 41	23			
20 MV	Saturne 20	8	Philips (SL 75/20)	3	31
	Saturne 11	9	Clinac 2100C	6	(-17)
	Saturne 42	5			
25-40 MV	Sagittaire 32 MV	7			15
	Sagittaire 40 MV	3			(-2)
	Saturne 25 MV	5			
20-25 MV	Saturne 111	4			4
25 MV	Saturne 43	37	Philips (SL 75/25)	9	56
			Siemens (Mevetron KD2)	10	(+12)
Total Linear Accelerators		163		59	222
					(+14)
	B. C	THER 7	YPES OF RADIATION THERAPY	UNITS	
Cobalt Uni	ts			133 (-11)	
Betatron				1	
Hadron The	empy				
Cyclotron:	neutron therapy	(Orléans)		1	
Cyclotron:	neutron + proton	therapy (Nice)	1	
Synchrotro	n: protontherapy	(Saclay)		1	

Linear accelerators are manufactured by several vendors

γ-Ray Radiation Therapy The systems can be rather compact



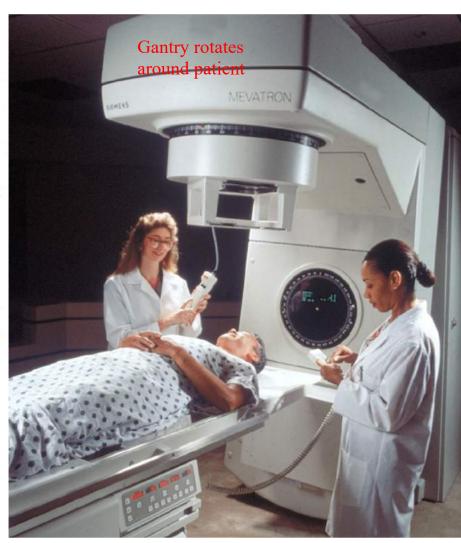
Varian Clinac 1800 Medical linear accelerator





γ-Rays Production

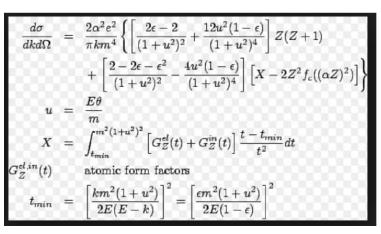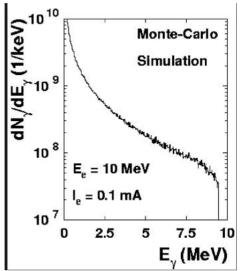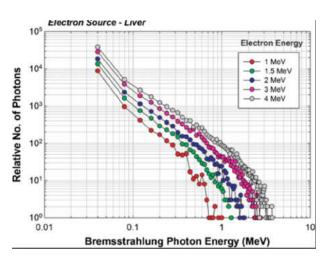Medical linacs use monoenergetic electron beams between 4 and 25 MeV. Electron beam collides with a a high-density (such as tungsten) target generating via process called Bremsstrahlung (from *bremsen* "to brake" and *Strahlung* "radiation", http://en.wikipedia.org/wiki/Bremsstrahlung) hard-X-rays and γ -Rays with energy spectrum up to the electron beam energy












γ-Ray Radiation Therapy

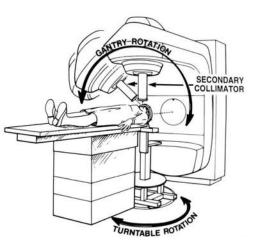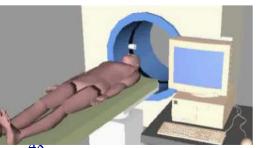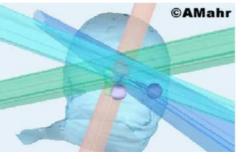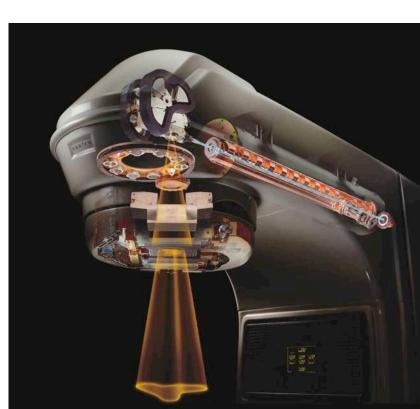
- The gamma-rays beam is further filtered to remove soft photons, collimated, shaped to fit specific task
- The beam is then delivered at multiple angles to minimize the radiation exposure of the surrounding tissue and to deliver the necessary dose of the radiation to a tumor
- It is all computer controlled from the patient model
- This is a BIG business...












Hadron radiation therapy

- Comparing with γ -ray radiation therapy it is more effective, but also much more expensive
- Instead of room it occupies a building with the hadron beam source located in well-shielded accelerator hall
- There are fewer hadron (proton or ion) therapy centers


Why Hadron radiation therapy?

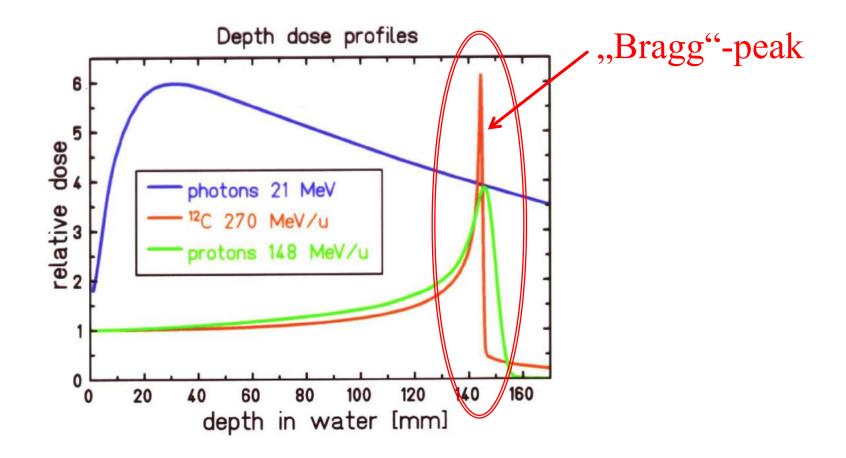- Hadron Beams Slow Down And Stop depositing the energy at the very end of the pass
- While γ -rays deposit the energy evenly through the tissue
- Thus with hadron it is possible to concentrate the exposure where it is needed and reduce damage to the surrounding healthy tissue by 4-6 fold
- In medicine it can be difference between life and death




Hadron radiation therapy It's simply the physics!

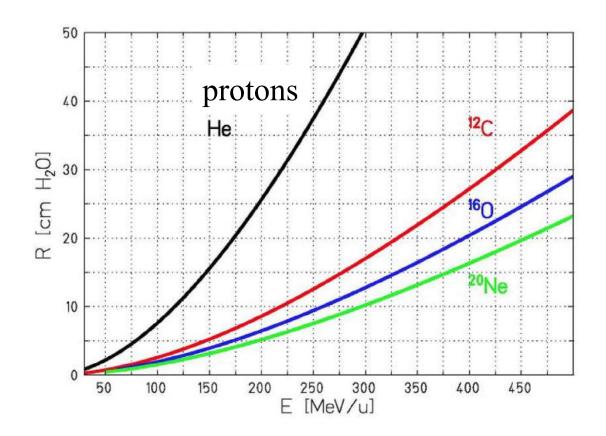Depth range of the beam penetration in water should be ~ 30 cm. It defines the energy of the accelerator: p ~ 220 MeV, C ions ~ 430 MeV/u



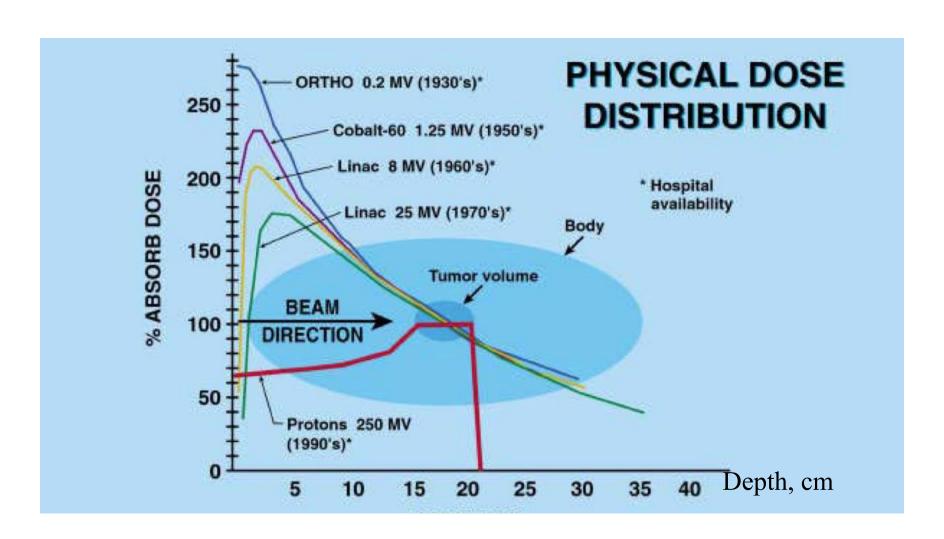Hadron radiation therapy It's simply the physics!



History of Hadron radiation therapy

History of medical applications of accelerators

1929 Invention of cyclotron by Ernest Lawrence

1930's Experimental neutron therapy

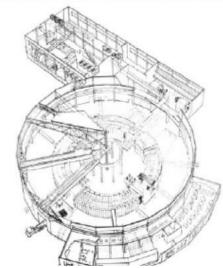
1946 R. R. Wilson proposed proton & ion therapy

1950's Proton therapy, LBL Berkeley (184" cyclotron)


1945 Edwin Mattison McMillan at University of California and Vladimir Iosifovich Veksler (Soviet Union) invented the synchrotron principle

1975 Begin of carbon therapy in Bevalac synchrotron (Berkeley)






History of Hadron radiation therapy






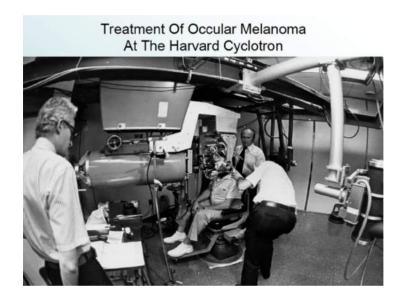First Hospital Based Particle Therapy Facility –
Loma Linda/USA






Particle Therapy Facilities - worldwide

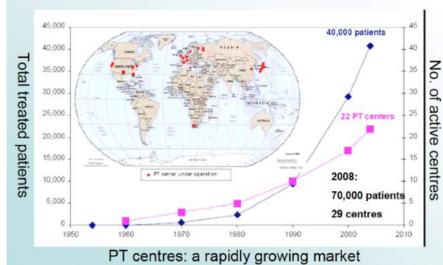


Proton Therapy Synchrotron at Fermilab

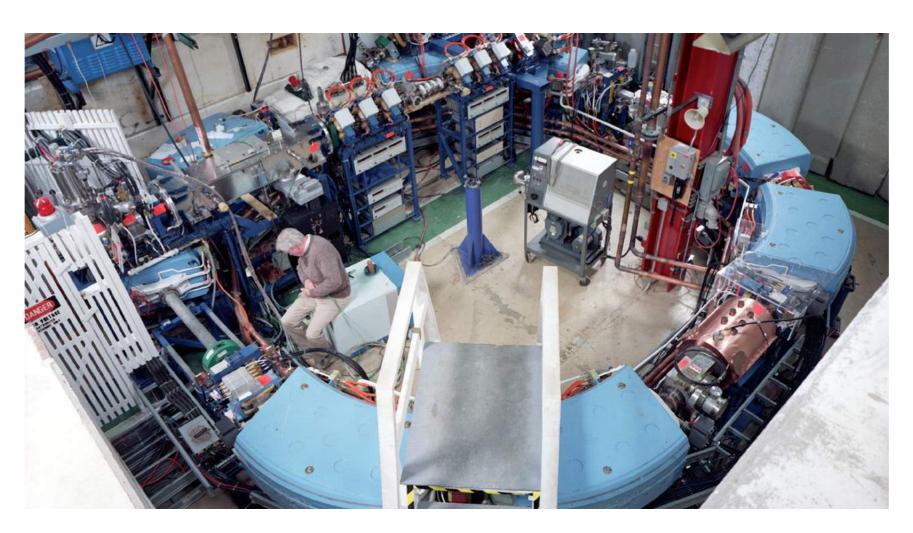

Hadron therapy centers

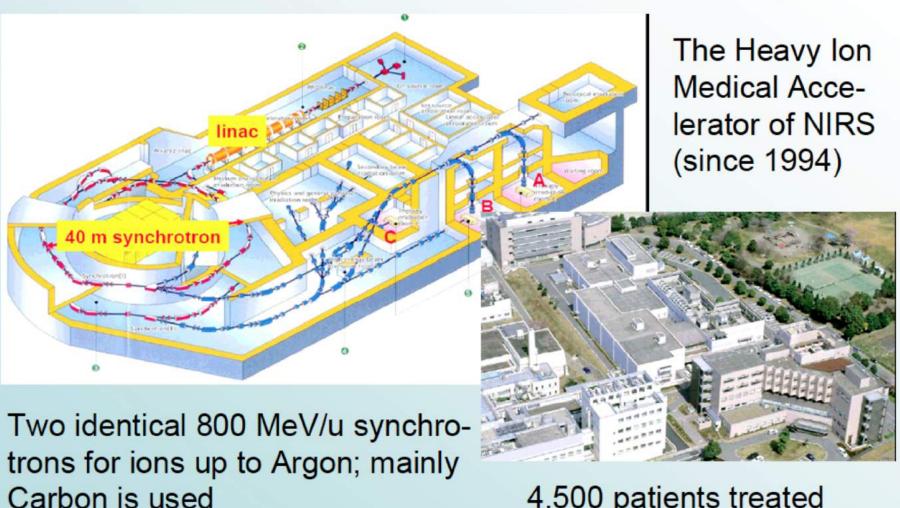
Particle Therapy Facilities - HIMAC/Japan



4,500 patients treated

Hadron therapy centers

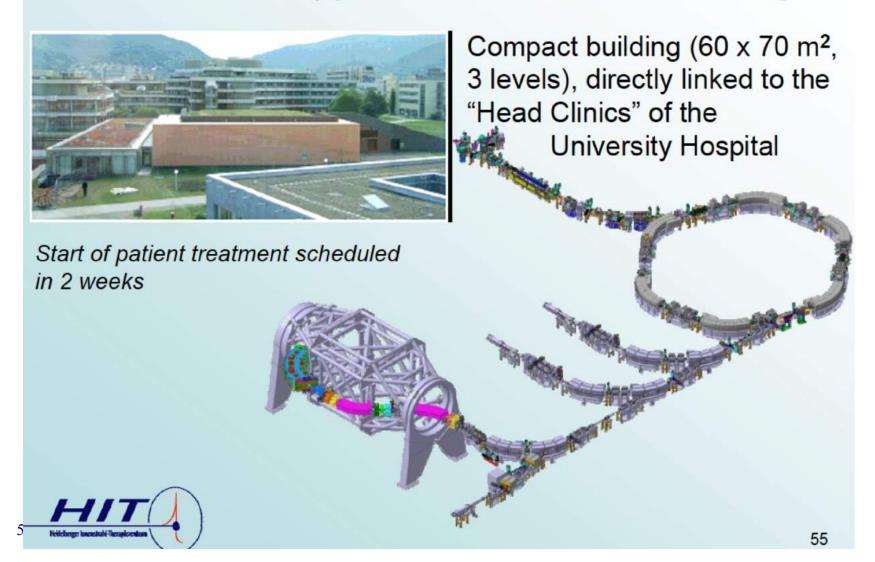Particle Therapy Facilities - HIT/Heidelberg



Therapy Facility HIT/Heidelberg

World's first isocentric ion gantry –including a scanning system: $\emptyset = 13$ m, 25m long, 600 tons, 0.5 mm max. deformation



Gantries: goal is to propagate an focus hadron beam with variable energies

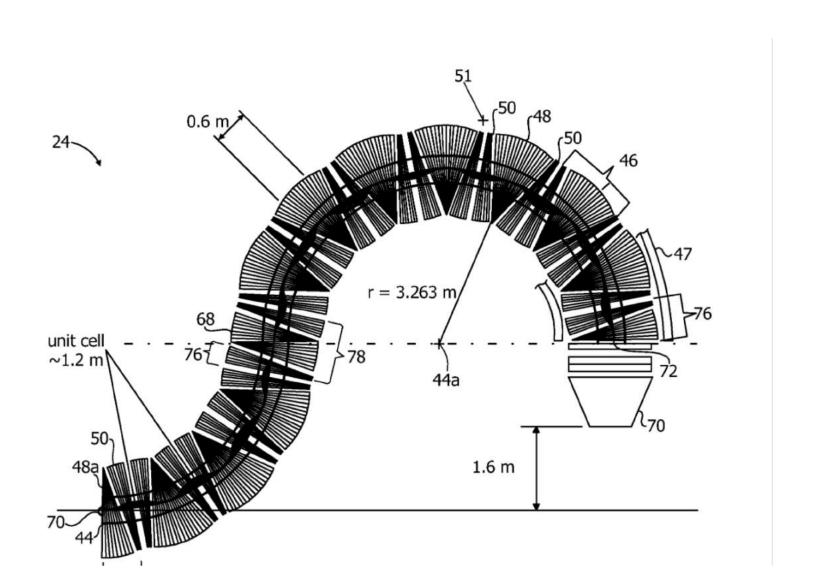


Gantries: monsters in modern accelerators






New ideas: compact FFAG gantry (© D. Trbojevic, BNL)



Physics and Biology of radiation therapy

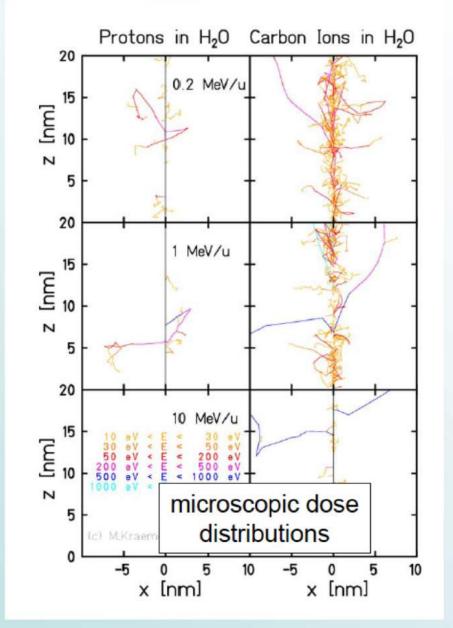
Basic effect of radiation on cells: energy loss in matter leads to defects in the DNA – double strand breaks of the DNA kills the cell. Tumor cells have less repair capabilities than normal cells.








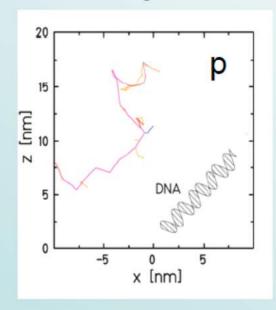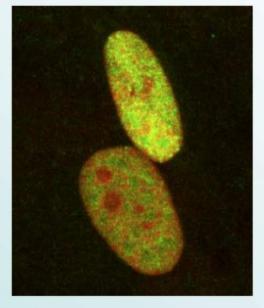
Physics and Biology of radiation therapy






Low LET

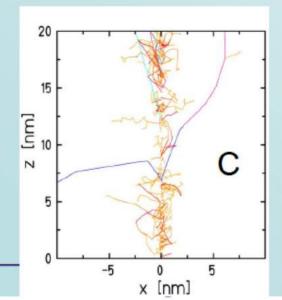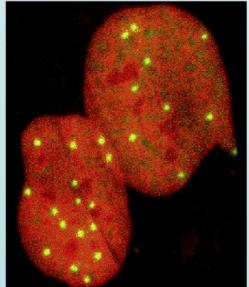Homogeneous deposition of dose





High LET

Local deposition of high doses

LET: Linear energy transfer

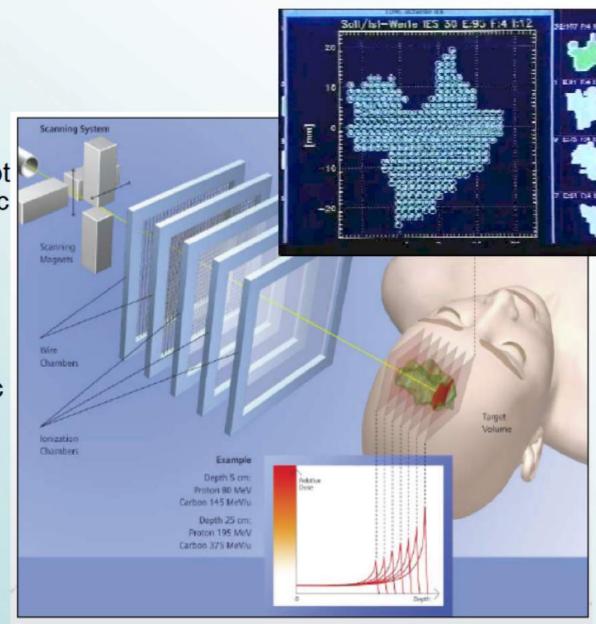
Optimized Treatment By Beam Scanning

Development in the 90ies: Scanning techniques

a) Protons (Pedroni PSI): spot scanning gantry (1D magnetic pencil beam scanning) plus passive range stacking (digital range shifter)


b) lons (Haberer et al.): raster scanning (2D magnetic pencil beam scanning) plus active range stacking (spot size, intensity) in the accelerator





Optimization of the treatment

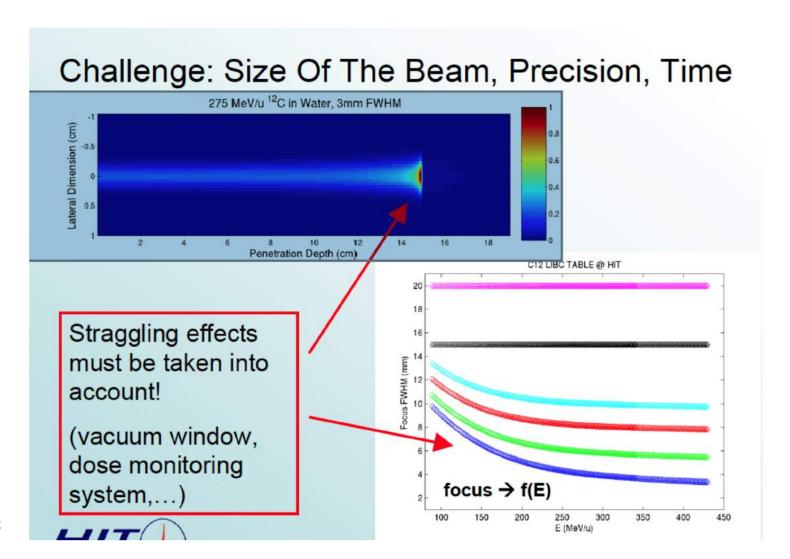
- ✓ Modern trend is to have exposures from multiple directions with multiple energies
- ✓ Hence, accelerator should provide a well controlled intensity shots of the beam with programed energy not a trivial fit for a hadron accelerator




Optimization of the treatment

Beam Size

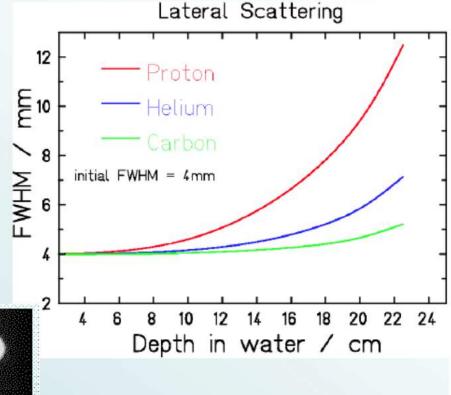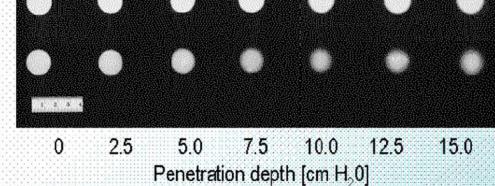Higher local precision with carbon for deepseated tumour treatment





What is a good medical isotope?

- For applications in medicine, nature and "man-made" physics approaches provide many different radionuclides to choose from.
- The choice of radionuclide is critical for achieving successful diagnostic imaging and cancer treatment outcomes.
- Objectives:
 - 1) Diagnostic nuclear medicine: high quality images of activity in the patient, with low patient radiation dose
 - 2) Therapeutic nuclear medicine: high amount of energy imparted to the target tissue (to destroy cancer cells) relative to critical normal organs and tissues (to prevent radiation damage and side-effects)

Medical isotope shortages

Officials Scramble for Solutions to Global Isotope Shortages

As global demand continues to grow for the medical isotope necessary for imaging procedures, most of the reactors used to produce technetium-99m (Tc-99m) will be permanently decommissioned within six years. A task force set up last year in the EU to consider solutions to isotope shortages released its first report this month to the European Commission. The report suggests convening stakeholders to discuss alternative diagnostic and therapeutic procedures.

Reactor shutdown causes another isotope shortage Updated Fri. Dec. 12 2008 7:08 PM ET

CTV-ca News Stalf

A temporary shutdown at the Chalk River, Ont. nuclear reactor is causing a shortage of medical isotopes, forcing Canadian doctors to scramble to cancel and rearrange appointments with their patients.

The isotope shortage is expected to last until the middle of next week, CTV News has learned.

The shortage is expected to affect Ontario, Quebec, parts of the Maritimes, the northern United States and perhaps even Mexico.

Atomic Energy of Canada Ltd., responsible for the Chalk River nuclear facility, told CTV News that the shutdown was 'normal' on Thursday night, but on Friday said the shutdown was 'longer than expected.'



Radiopharmaceuticals

- Positron Emitters
- Beta/gamma Emitters
- Alpha Emitters

Medical Devices

- Sealed Sources
- Microsphere Applications
- Nanosphere Applications

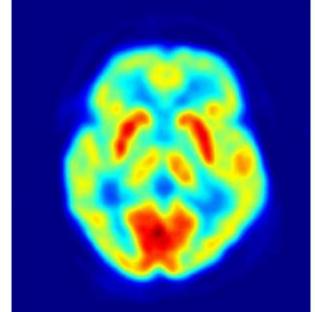
Positron emitters



- Cancer Metabolism and Functional Imaging
 - F-18-fluorodeoxyglucose (FDG) glucose analog, measures hexokinase activity (glucose metabolism), phosphorylated by hexokinase to F-18-FDG-6-PO4, elevated in tumor cells, chemically trapped in cells
 - F-18-amino acids (phenylalanine, tyrosine) image metastatic lesions

F-18-fluorothymidine measures thymidine kinase activity (DNA synthesis)

- F-18-flouromisonidazol (FMISO) images tumor hypoxia
- F-18-estradiol breast tumor detection




Radioisotope Production


- Applications (>50 routine radioisotopes)
 - □ Industrial Gauging & calibration
 - ☐ Medical Diagnostics & treatment
 - SPECT
 - PET
 - Brachytherapy
- Cyclotrons & Linacs both protons & deuterons
 - PET self shielded systems from 7 to 18 MeV with current < 200 μA)
 - SPECT energies from 22 to 70 MeV with currents up to 2 mA
- Vendors
 - ☐ GE Healthcare (Sweden)
 - Siemens Medical Systems (USA)
 - □ Ion Beam Applications SA (Belgium)
 - Advanced Cyclotron Systems (Canada)
 - Sumitomo Heavy Industries (Japan)
 - Samyoung Unitech Co. (Korea)
 - □ Thales GERAC (France)
 - AccSys Technology, Inc. (USA)



Large growth in compact accelerators for PET.

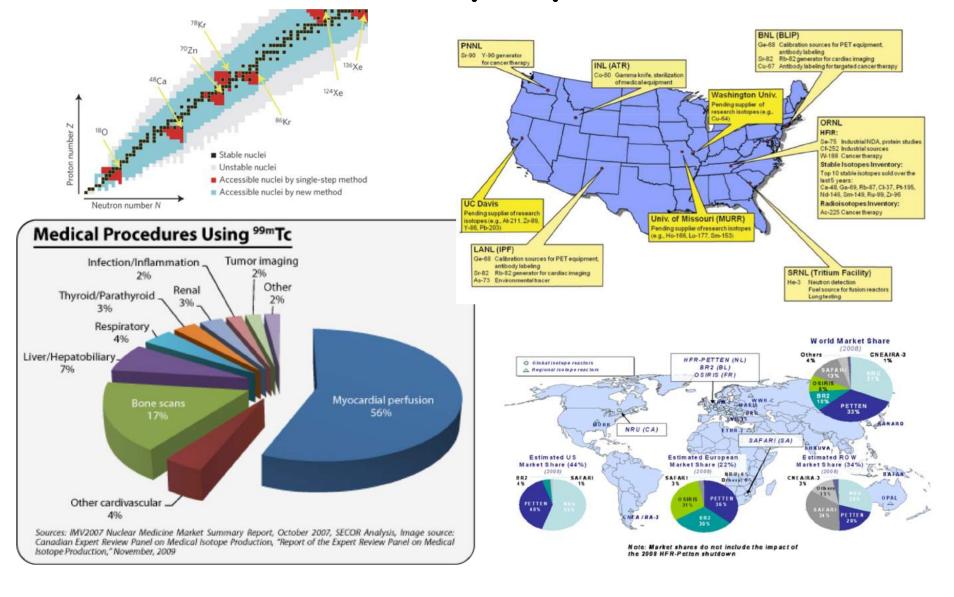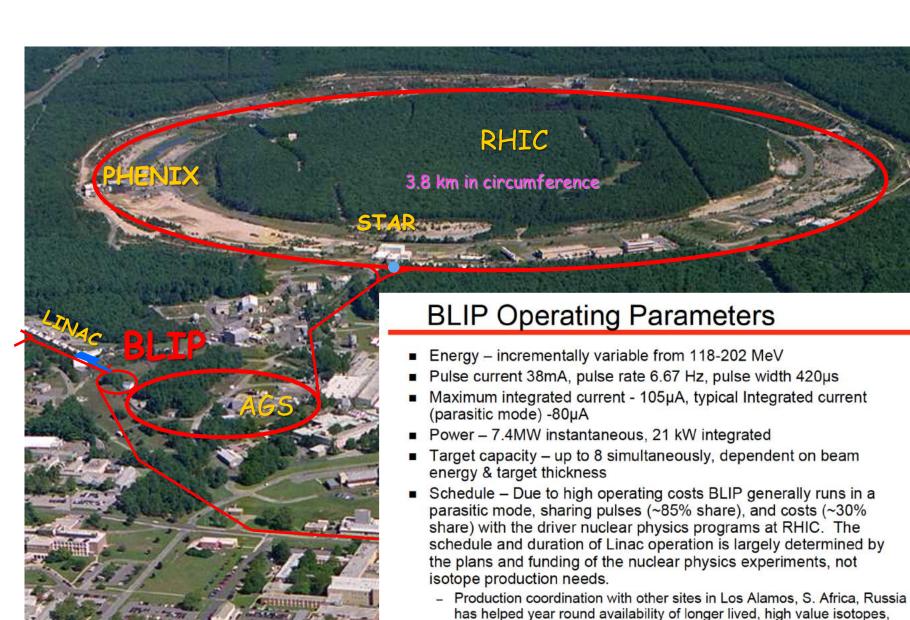Radio isotope production





such as Sr-82 and Ge-68.

Summary

- We only touched upon a variety of practical/societal applications of accelerators
- Accelerators play and will continue playing an important role in technological progress of the humanity – both through direct economical impact and spin-off from the knowledge obtained using accelerators or technology developed for them
- Advances in accelerator technology, especially tend towards a compact accelerators, are closely watched by industrialist
- BTW, this is why finding industrial position for accelerator physicists and engineers is a relatively easy fit...

End of lectures

Instead of conclusions

- You learned quite a bit about the accelerators, accelerator science and accelerator applications
- We hope that you would use this knowledge in your future studies and research